


# User's Manual

## SC Fast Connector, Universal (for 3.0 / 2.0 / 0.9 / 0.25 mm)




Parts information.  
(Make sure Button is fully released before use.)

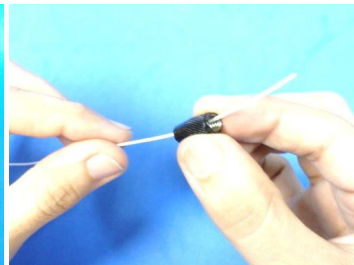


1. Wear Boot.

Fiber /Cable	Tube
0.25mm	Black tube
0.9 mm	Black tube
2.0 mm	White tube
3.0 mm	N/A


2. Wear tube.

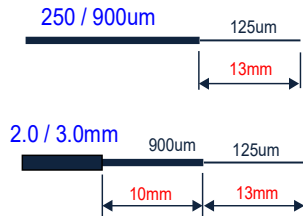


3. Prepare fiber as the dimension shown above. Strip and clean it. Perform its bending test.

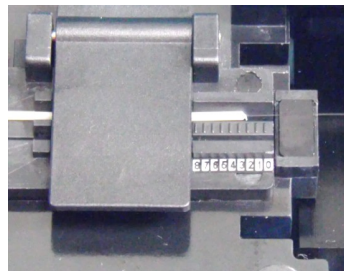


4. Cleave fiber precisely.

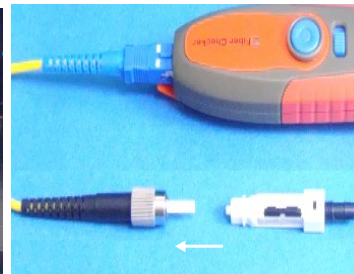


5. Remove Dust Cap and clean Ferrule. Connect QSC with fiber checker to check its loss. This step is strongly recommended for a good connection.

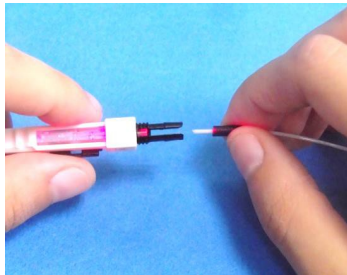

6. Insert fiber to QSC until it touches the fiber inside.

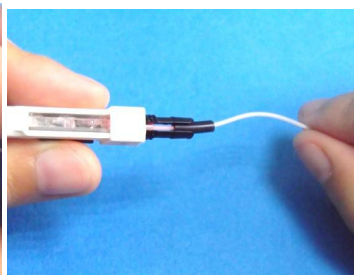


7. Form a small curve. Then, press Button to connect two fibers. You will see no leakage of red light for a low loss connection.

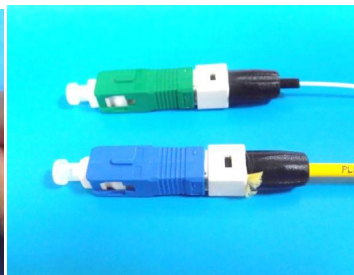

8. Lock Boot. Wear Dust Cap and Housing. Now the job is done.



**How to connect it with 3.0mm cable?** Insert fiber as shown above. Cut strength member after locking Boot.

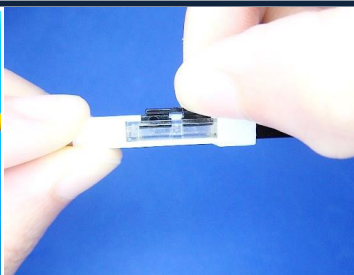

**How to re-use it?** Releasing its Button can be done by finger nail.