



Field Terminable Plug Installation Instructions

1

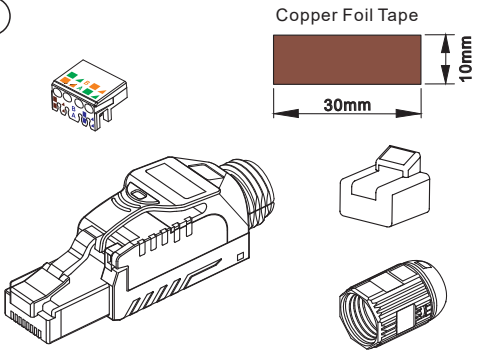


Copper Foil Tape
30mm x 10mm

2

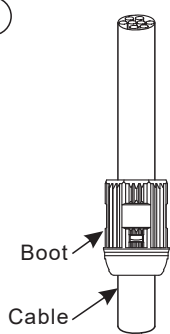


Boot
Cable

3

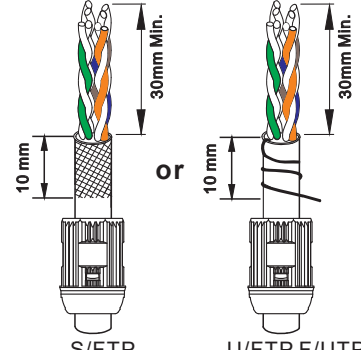


30mm Min.
10 mm
or
10 mm
30mm Min.
S/FTP
U/FTP.F/UTP

4

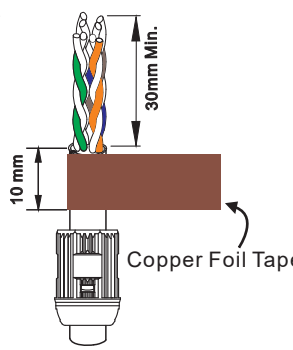


30mm Min.
10 mm
Copper Foil Tape

5

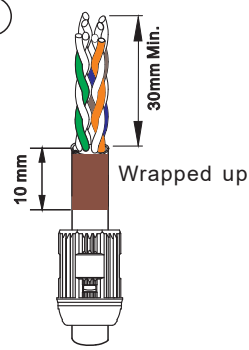


30mm Min.
10 mm
Wrapped up

6

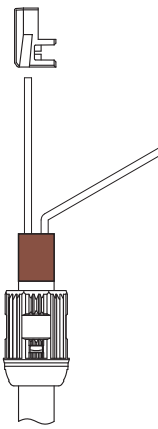


7

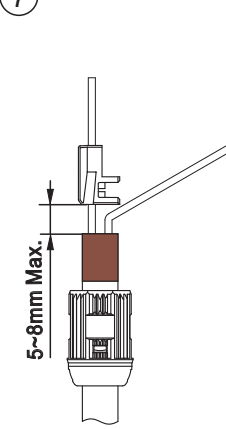


5-8mm Max.


8

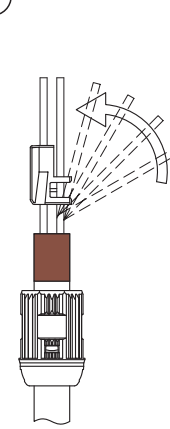


9 Cut front row wires flush

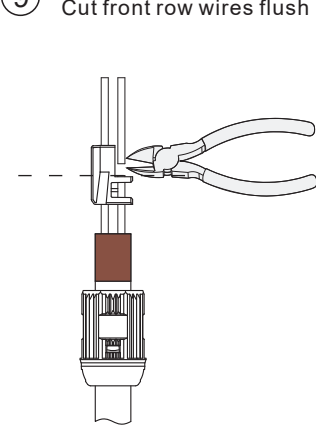

10 Cut rear row wires flush

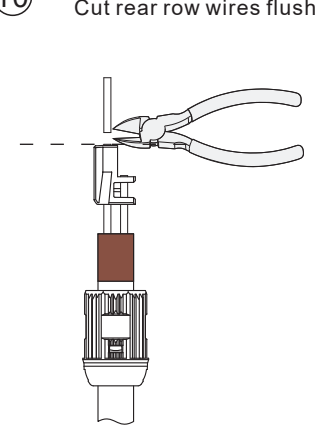


11

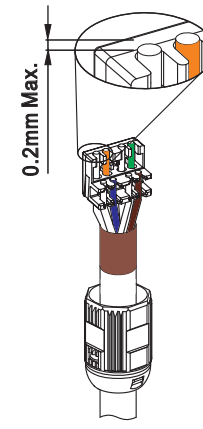


0.2mm Max.

12

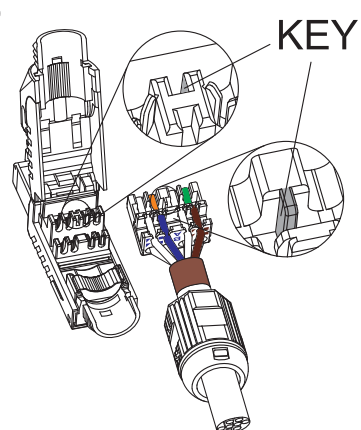


KEY

13

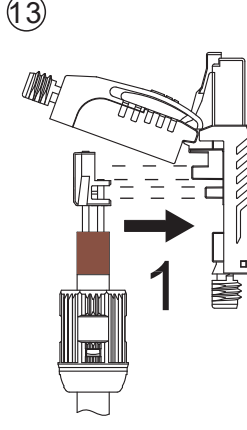


1

14

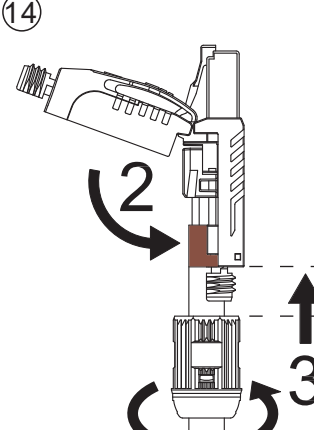

2
3

15

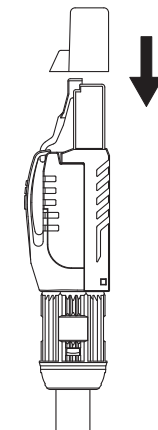

16

Legend

1	2	3	4	5	6	7	8
W-G	G	W-O	BL	W-BL	O	W-BR	BR

Pin assignment T568A

1	2	3	4	5	6	7	8
W-O	O	W-G	BL	W-BL	G	W-BR	BR

Pin assignment T568B

	Solid	Stranded	Cable (O.D.)
C6A	23~26AWG	23~26AWG	6.0~7.5mm
C8	22~24AWG	22~24AWG	7.0~8.5mm